

Ablemail Electronics

A Division of Merlyn Electronics

Merlyn House, Merlyn Rd, Salford, M6 6EL Tel: +44(0)161 745 7697 Fax: +44(0)161 737 5615 info@ablemail.co.uk www.ablemail.co.uk

PART NUMBER : AMR12-32-10

DESCRIPTION:

This unit is a software controlled switching type voltage converter intended for use on vehicles with a 12V electrical system to power 32V accessories. The unit can support 8A continuous and 10A intermittent output loads. The unit has current output overload protection and over temperature protection. Both protection modes reset automatically. If a greater current is required units can be run in parallel or a bigger unit selected from the range

The high speed switching converter provides a low noise output (<50mV) which is very closely regulated against variation of input voltage and changes in output load current This makes the unit suitable for supplying even the most sensitive loads . As the unit contains an upconverter it is ideal for supplying loads over long cable lengths with no reduction in output voltage as in caravans and heavy goods vehicles .

The 12V input and 32V outputs share a common negative The output can be be configured to turn on when a vehicle engine is running (engine run detection) or on a voltage signal (Ignition Control).

An interface can be added to allow remote enable/disable of the output voltage and real time adjustment of the output voltage. The interface has outputs to allows information to be passed to an external power management system An led indicates when the converter is running and provides fault indication and the Interface card allows remote indication (cab display) to be added or signals to be passed to the other elctronic systems .

A serial interface is fitted as standard and this in conjunction with the Ablemail Software Interface allows a customer to make configuration changes. The serial interface and powerful in built microcontroller and software allow the converter to work as the system power management controller . The serial interface also allows external electroncis to control the converter .

The unit is assembled in an aluminium extruded case, this allows reliable operation in harsh vehicle environments and areas of high ambient temperatures. It can be supplied with a variety of connection options see the Ablemail Hardware Options

This product is part of a large range and if this product does not meet your requirement, please contact our technical department to see if we can meet your exact needs.

ISOLATION	Non-Isolated		
INPUT VOLTAGE	12Volt nominal vehicle supply (8-32V)		
OUTPUT VOLTAGE	32V ± 5%		
OUTPUT LOAD CURRENT	8A Continuous / 10A Intermittent		
NO LOAD INPUT CURRENT	Max 2mA @ 12V input		
PROTECTION	Output overload & over temperature protection with fully automatic reset		
OPERATING TEMPERATURE	Maximum 70°C. Minimum -30°C		
STANDARDS	E11 Approval-Immunity requirements UNECE regulation 10 issue 4 Which covers all aspects of EN50489:2010 & CE Approval-Immunity to requirements of EN61204-3		
SIZE AND WEIGHT	Length: 150mm, Height: 38mm, Width: 93mm, 450g		
CONNECTIONS	200mm flying leads of thin wall auto cable. Wiring Connections:		
ABLEPOWER UNIVERSAL BATTERY CHARGER	12V Input Positive Red 32V Output Positive Purple		
CONTRACTOR DE LA COLOR DE LA C	Common Black		

For Guidance on component size Installation & troubleshooting: See 15A converter installation Instructions

The product images shown are for illustration purposes only. Ablemail Electronics reserves the right to change product images & specifications at any time without notice.



Ablemail Electronics

A Division of Merlyn Electronics


Merlyn House, Merlyn Rd, Salford, M6 6EL Tel: +44(0)161 745 7697 Fax: +44(0)161 737 5615 info@ablemail.co.uk www.ablemail.co.uk

PART NUMBER : AMR12-32-10

ABLEMAIL SOFTWARE INTERFACE (ASI) :

ttings Hardware Informa	ion Investigate Device Monitor Device		
nplates and Profiles			
It is possible to load stand be loaded and shown in the Device Settings	lards or existing profiles into the interface browsing through "Hardwa to bottom section of this page and the hardware informations in the f	e Information" and "Device Settings" and double clicking on a , dhi or , dsp file. It is also po p section of the next page.	ssible to do so from the "File menu". The device settings w
Profiles Templates			
tings Enter or select the charai	teristics and then upload them to the device from the "device menu"	Once correctly set up, save these settings as a new profile/template through the "File me	nu". This will be the only way to identify a device once it's
been configured. Customer	Ablemai	For help with device settings hover the mouse over the set	ting
Product Name	12V LA Charger	you wish to change.	
Output Type	Lead-Acid Battery Charger	~	
Output Regime	Constant Current Only	*	
Output 'Float' Voltage	12.49V	× 1	
Boost Voltage	13.09V	v	
Battery Voltage	24V Battery	v	
Remote Temp. Cut Off	90%	~	
Run Control	Altenator/Supply Control	~	
Run Control Timer	5 Minute Timer	~	
	2.70V	*	
	2.52V	~	
Run Control On Voltage Run Control Off Voltage			
Run Control On Voltage	2.52V	×	
Run Control On Voltage Run Control Off Voltage		<u>v</u>	
Run Control On Voltage Run Control Off Voltage Blue-Motion Off Voltage	2.52V LED Charging Status LED Protection Modes		
Run Control On Voltage Run Control Off Voltage Blue-Motion Off Voltage Status Output Control	LED Charging Status	×	
Run Control On Voltage Run Control Off Voltage Blue-Motion Off Voltage Status Output Control Alarm Output Control Low Power Mode	LED Charging Status LED Protection Modes	× ×	
Run Control On Voltage Run Control Off Voltage Blue-Motion Off Voltage Status Output Control Alarm Output Control Low Power Mode	LED Charging Status LED Protection Modes Low Power Mode Disabled	× ×	

Maximum Curent at 32V Output [8V,14V]

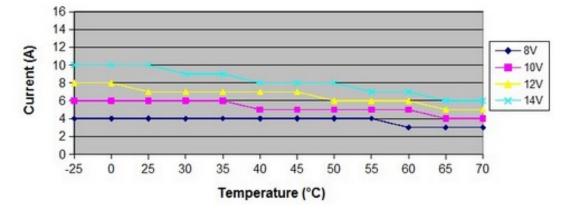

For More Info see Ablemail Universal Power Convertor Performance Charts